


3/8" X 1/2" HARDWOOD, BEVELED



ATTACH TO THE FRONT OF THE PANEL & PAINT BEFORE INSTALL.

Before installing F1-F4, install F5a. With wing in place, drill 3/8" holes thru the wing L.E. using these holes as guides. Remove the wing and install the wing dowels in it.

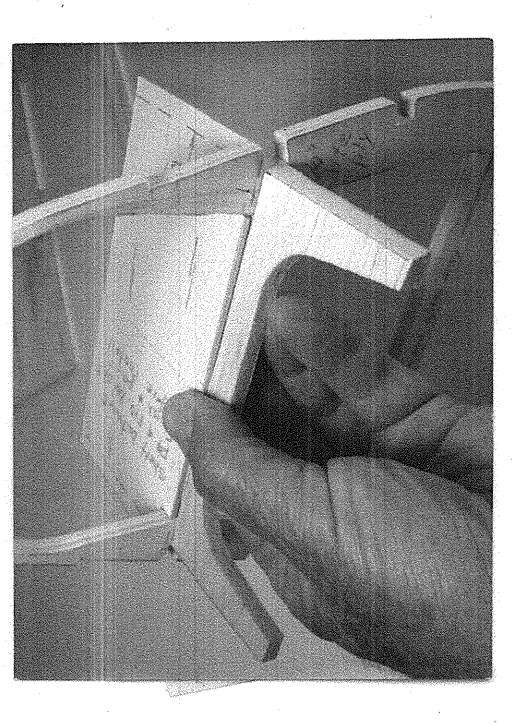